 




OWNER'S MANUAL

IMPORTANT: READ OWNER'S MANUAL CAREFULLY

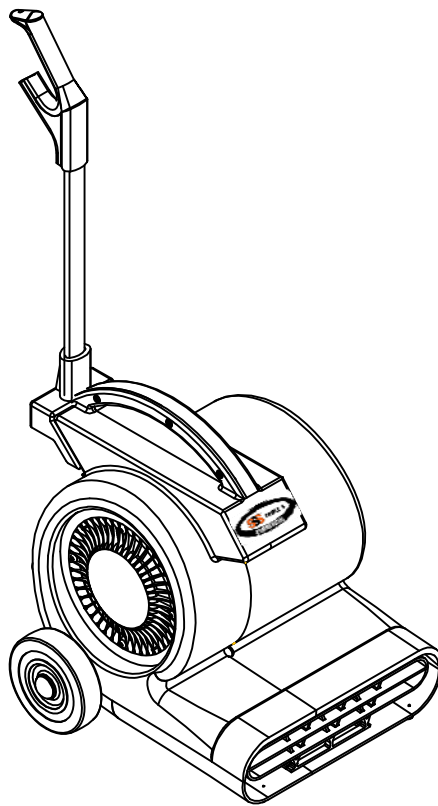

MODEL :

PUMA

Shown with optional transport kit

SS **TRIPLE S**
NATIONWIDE
SANITARY SOLUTIONS
1-800-323-2251
www.triple-s.com

FOR YOUR CONVENIENCE, RECORD THE FOLLOWING
IMPORTANT INFORMATION

MODEL: _____

SERIAL NUMBER: _____

DATE PURCHASED: _____

PURCHASED FROM: _____


TABLE OF CONTENTS

| | |
|--|------------|
| Safety Precautions | 3 |
| Machine Operation | 4 |
| Machine Maintenance & Storage | 4 |
| Parts List | 5-9 |
| Wiring Diagram | 10 |
| Warranty Policy | 11 |

Safety Precautions

!!! This machine must be grounded!

 Grounding provides a path of least resistance for electrical current. To reduce the risk of electrical shock should the machine malfunction, the machine has a special grounding plug. Don't remove the ground pin under any circumstances!

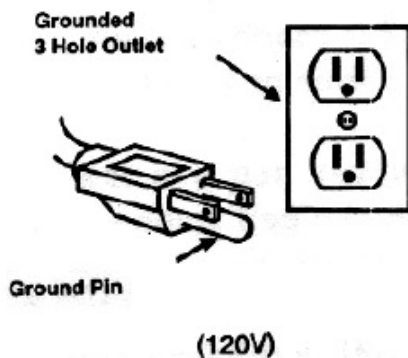

This machine is intended for commercial use. It is constructed for use in an indoor environment and is not intended for any other use. Use only recommended accessories.

All operators shall read, understand and exercise the following safety precautions:

1] Do not operate machine:

- Unless trained and authorized.
- Unless you have read and understand operators manual.
- In flammable or explosive areas.
- With a damaged cord or plug.
- If not in proper operating condition.
- In outdoor areas.

- In standing water
- With the use of extension cords.

2] Before operating machine:

- Make sure all safety devices are in place and operate properly.

3] When using machine:

- Do not run machine over cord.
- Do not pull machine by cord or plug
- Do not pull cord around sharp edges or corners.
- Do not unplug by pulling on the cord.
- Do not stretch cord.
- Do not handle plug with wet hands.
- Keep cord away from heated surfaces.
- Do not pick up burning or smoking debris such as cigarettes, matches or hot ashes.
- Report machine damage or faulty operation immediately.

4] Before leaving or servicing machine:

- Turn off machine.
- Unplug cord from outlet.

5] When servicing machine:

- Unplug cord from outlet.
- Use manufacturer supplied or approved replacements parts.

Operation of Air Mover

* **Read operators manual thoroughly prior to operating or servicing this machine.**

BASIC OPERATION

1] Check machine for any obstructions in fan prior to operation.

* If an item blocks the intakes of the blower, this will hurt the performance of the blower, and could cause the motor to overheat.

2] Adjust machine to desired position for operation by either pulling it back to it's preset height adjustments, or by lowering the "kick stand" and setting the machine on the stand.

3] Plug power cord into a grounded outlet.

* **Do not use an extension cord in conjunction with the standard power cord.**

4] This machine has three power settings Turn the power knob to the desired speed. Low = 1, Med = 2 & High = 3.

5] To stop the machine at any time, simply turn the power knob to the "off" position.

* **Never stick any object into the air inlet vents or the air outlet vent.**

MAINTENANCE

To keep the machine performing well for many years, please follow the following maintenance procedures.

* **Always confirm that the machine is unplugged prior to performing any maintenance or repairs.**

1] Unplug machine as soon as you are done using it.

2] Wrap the power cord around the carrying handle.

3] Check power cord for any damage. If any damage is detected, replace the cord immediately.

4] If you have the wheel kit, lubricate wheels with a water resistant lubricant every month.

5] Check machine for loose or missing nuts and bolts, and replace as necessary.

 
6] Clean the outside of the machine with a mild cleaner.

STORAGE

1] Unplug machine from power source.

2] Store in upright position in a dry area.

Parts List

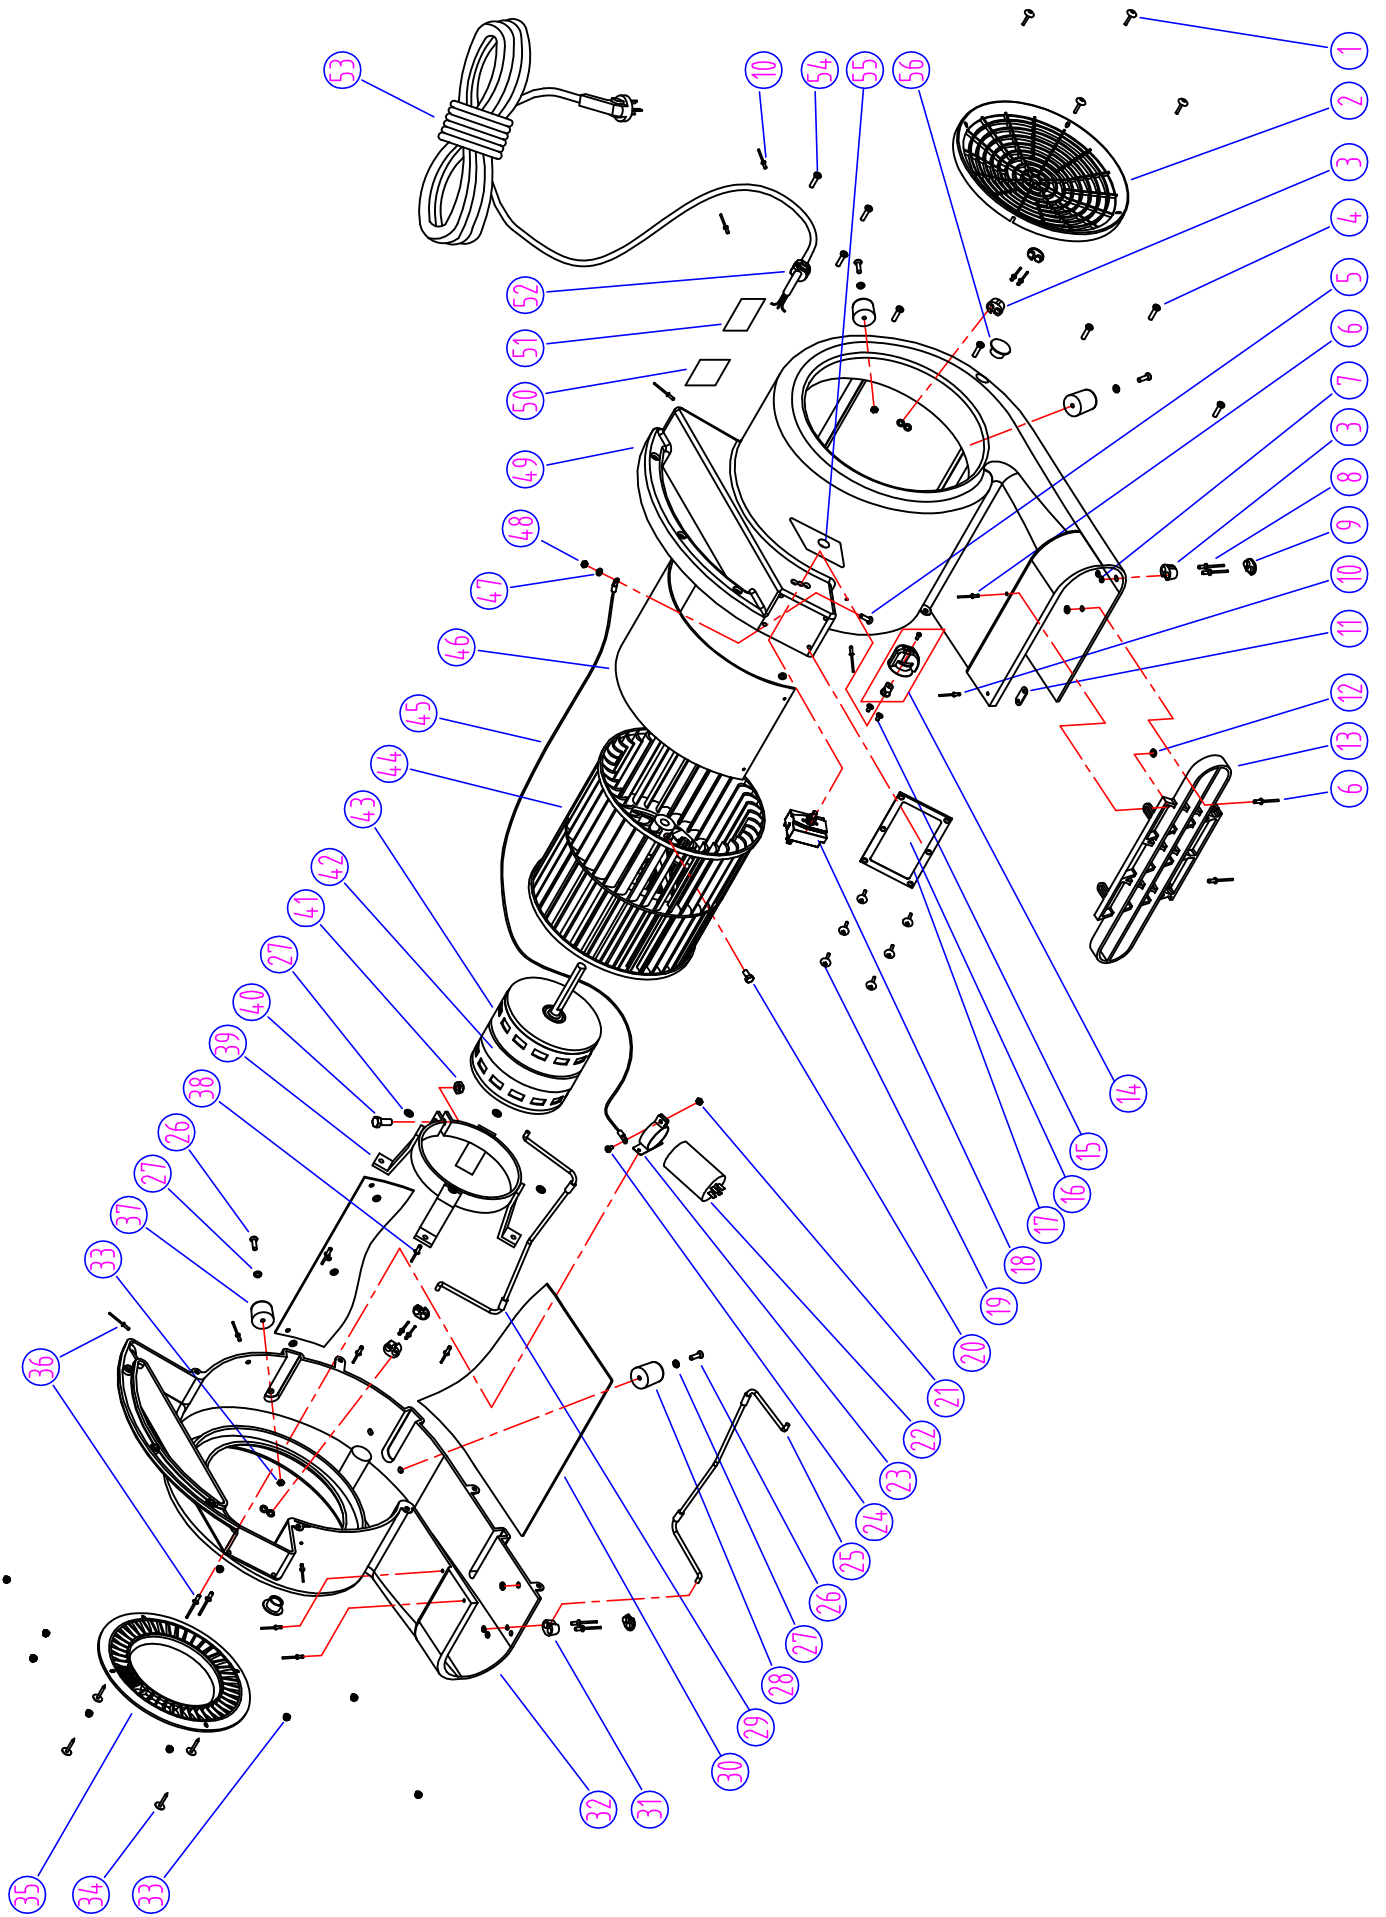


PARTS LIST

| DIA NO | PART NUMBER | DESCRIPTION | NO REQ'D |
|---------------|--------------------|-----------------------------|-----------------|
| 1 | VV13649 | SCREW,SELF-TAPPING,ST,M4X25 | 4 |
| 2 | VV30107 | LEFT NET,VENT,INTAKE | 1 |
| 3 | VV30102 | BLOCK,STAND,RIGHT FRONT | 2 |
| 4 | VF13613 | SCREW,M5X20 | 8 |
| 5 | VF14070 | SCREW,M4X25 | 1 |
| 6 | VV13647 | RIVET,M4.8X18 | 4 |
| 7 | VV13653 | WASHER,PLAIN,M3.5XM10X1.0 | 15 |
| 8 | VV13645 | RIVET,M3.2X16 | 4 |
| 9 | VV30124 | RUBBER,BLOCK,STAND | 2 |
| 10 | VV20352 | RIVET,M4X12 | 2 |
| 11 | VV30119 | CONNECTING PLATE | 1 |
| 12 | VA13482 | WASHER,PLAIN,M5.0XM11X1.0 | 4 |
| 13 | VV30112 | NET,VENT,OUTLET | 1 |
| 14 | VF30015 | ROTATOR,SWITCH,KIT | 1 |
| 15 | VV13658 | SCREW,SWITCH,M5X20 | 2 |
| 16 | VV30500TR | PLATE LABEL | 1 |
| 17 | VV30103 | PLATE | 1 |
| 18 | VV30180 | SWITCH | 1 |
| 19 | VV13608A | SCREW,SELF-TAPPING,ST,M4X12 | 6 |
| 20 | VV13656 | SCREW,M8X16 | 1 |
| 21 | VV13609 | NUT,M4 | 1 |
| 22 | VV30143 | CAPACITOR,30UF/300V | 1 |
| 23 | VV30014 | CLAMP,CAPACITOR | 1 |
| 24 | VV13642 | SCREW,M4X8 | 1 |
| 25 | VV30115 | STAND | 2 |
| 26 | VA13475 | SCREW,M5X25 | 4 |
| 27 | VV13662 | WASHER,PLAIN,M5XM12X1.0 | 8 |
| 28 | VV30114-1 | RUBBER,STAND,38mm | 2 |
| 29 | VV30117 | SLEEVE,RUBBER | 2 |
| 30 | VV30118 | PLATE,CHAMBER | 1 |
| 31 | VV30200 | BLOCK,STAND,LEFT FRONT | 2 |
| 32 | VV30100A | HOUSING,LEFT | 1 |
| 33 | GT13022 | NUT,LOCK,M5 | 15 |

PARTS LIST

| DIA NO | PART NUMBER | DESCRIPTION | NO REQ'D |
|-------------------|------------------------|-----------------------------|---------------------|
| 34 | VV13640 | SCREW,SELF-TAPPING,ST,M4X16 | 4 |
| 35 | VV30110 | RIGHT NET,VENT,INTAKE | 1 |
| 36 | VV13655 | RIVET,M3.2X12 | 9 |
| 37 | VV30114 | RUBBER,STAND,48mm | 2 |
| 38 | VV13648 | RIVET,M6.4X18 | 4 |
| 39 | VV30011 | CLAMP,MOTOR | 1 |
| 40 | VV13657 | SCREW,M8X25 | 1 |
| 41 | VF13503 | NUT,LOCK,M8 | 1 |
| 42 | VV30116 | GASKET,MOTOR | 1 |
| 43 | YQ61000 | MOTOR,120V,3/4HP | 1 |
| 44 | VV30010 | IMPELLER,9" | 1 |
| 45 | VA21570 | CABLE,200mm | 1 |
| 46 | VV30118A | PLATE,CHAMBER | 1 |
| 47 | VF13527 | WASHER,TOOTH,M4 | 3 |
| 48 | VV20249 | NUT,M4 | 4 |
| 49 | VV30101A | HOUSING,RIGHT | 1 |
| 50 | VV30202 | READ MANUAL,LABEL | 1 |
| 51 | VV30505TR | SERIAL TAG | 1 |
| 52 | VV30182 | POWER BUSHING | 1 |
| 53 | VV30183U | POWER CORD | 1 |
| 54 | VV13636 | SCREW,M5X30 | 3 |
| 55 | VV30529 | LABEL,SWITCH | 1 |
| 56 | VV30122 | COVER,AXLE | 2 |

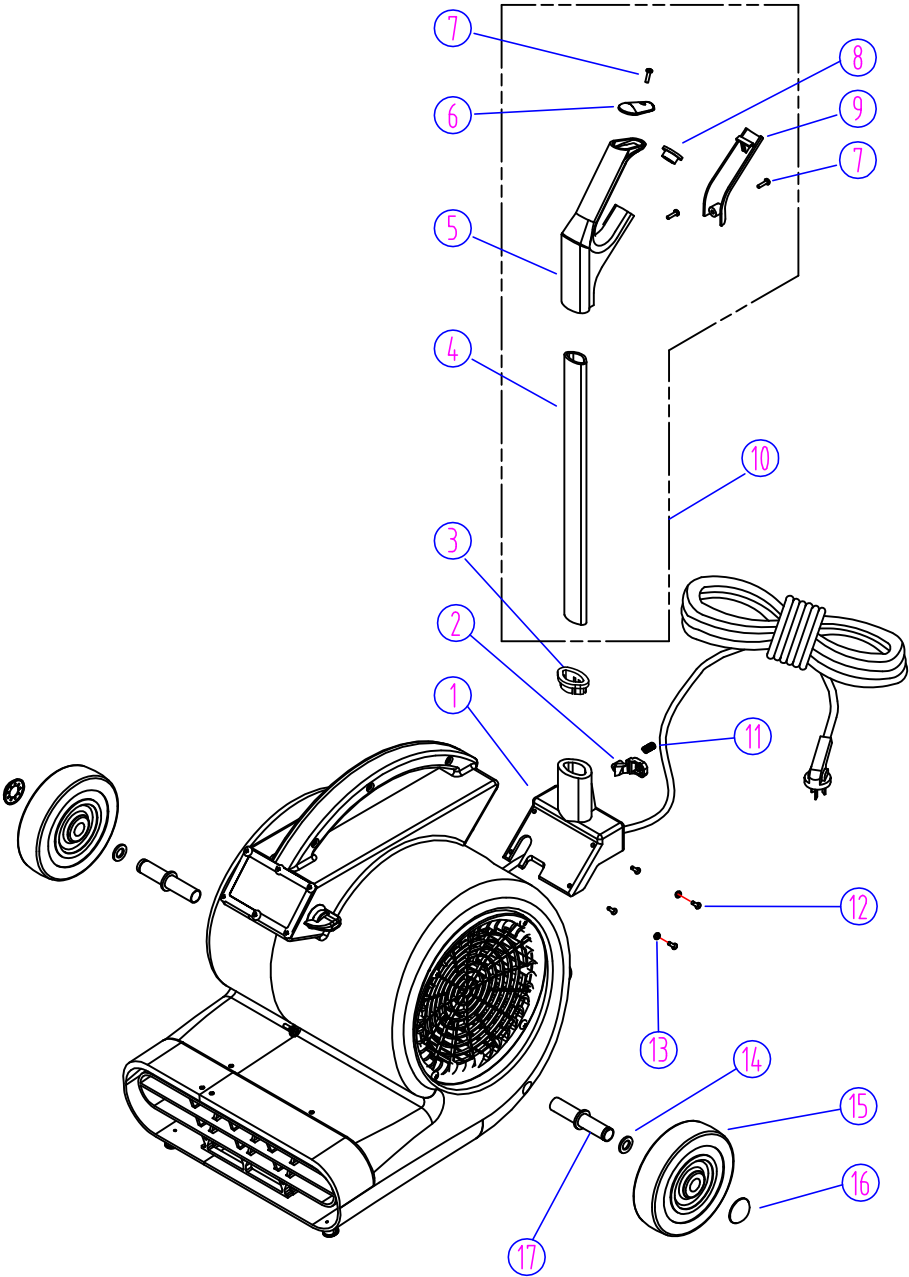 


**THE AXLES HAVE A VERY TIGHT TOLERANCE FIT.
LUBRICATE THEM WITH SOME SOAPY WATER BEFORE
DRIVING THEM INTO THE MOLDED RECEIVER.**

PARTS LIST

| DIA NO | PART NUMBER | DESCRIPTION | NO REQ'D |
|-------------------|------------------------|-----------------------------|---------------------|
| 1 | VV30120 | SEAT,HANDLE | 1 |
| 2 | VV30130 | RELEASE BUTTON | 1 |
| 3 | VV30121 | COVER,HANDLE SEAT | 1 |
| 4 | VV30106A | TUBE,AL | 1 |
| 5 | VV30132 | PLASTIC HANDLE | 1 |
| 6 | VV30134 | COVER,HANDLE | 1 |
| 7 | VV13640 | SCREW,SELF-TAPPING,ST,M4X16 | 3 |
| 8 | VV30123 | RUBBER COVER,HANDLE | 1 |
| 9 | VV30133 | BOTTOM,HANDLE | 1 |
| 10 | VV30109B | HANDLE ASSEMBLY | 1 |
| 11 | VV30131 | SPRING,RELEASE BUTTON | 1 |
| 12 | VV13661 | SCREW,M4X12 | 4 |
| 13 | VV13664 | WASHER,PLAIN,M4XM12X1 | 4 |
| 14 | VF47027 | WASHER,LOCK | 2 |
| 15 | VF47055BD | WHEEL,6.4" | 2 |
| 16 | VA96851 | CAP,AXLE | 2 |
| 17 | VV30111 | AXLE | 2 |

 Wiring Diagram

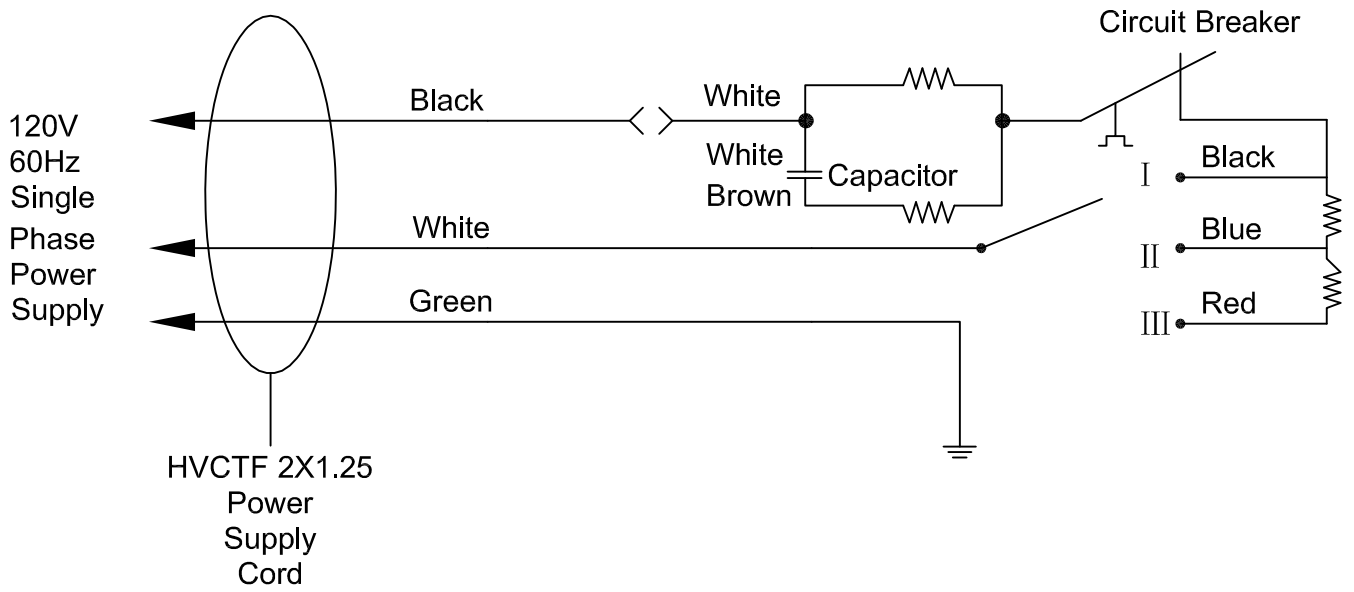



Warranty Policy

The warranty terms outlined below are in lieu of any other warranties, either stated or implied, including any implied warranty of merchantability, fitness for a particular purpose or otherwise. Under no circumstances will seller be liable for any loss, damage, expense or consequential damages arising in connection with the use or inability to use this product.

This warranty does not apply to damage or defect caused by accident, misuse, negligence, abuse, fire or to any Triple S product which has been serviced by anyone other than a Triple S authorized service representative. Housings or parts that have become damaged as a result of improper use of the machine are excluded from this warranty. Refer to owner's manual for proper machine use and maintenance. Parts that are expected to wear from normal use and, therefore are not covered under the parts warranty include, but are not limited to: batteries (pro-rated for one year); bearings; belts; brushes; filters; squeegees; switches; and tires.

This warranty commences on the date of purchase of the product by the original end user from an authorized Triple S distributor, subject to proof of purchase. If proof of purchase date is unavailable, the warranty begins 90 days after the sale of the product to an authorized Triple S distributor.

- Subject to the conditions outlined above, the manufacturer warrants the rotationally-molded polyethylene housings and parts on its machines to be free from defects in materials and workmanship, under normal use and service for twelve (12) years to the original purchaser.
- Under this warranty, the manufacturer guarantees the performance of non-polyethylene parts and components on Triple S machines to be free from defects for up to five (5) years to the original end user. Parts replaced under this warranty are guaranteed for the remainder of the original warranty period.
- Labor charges are covered for two (2) full years from the date of purchase for Triple S products, provided an authorized Triple S service provider is used for repair. No travel coverage is extended for cord electric machines.

Product Exceptions & Exclusions: Battery chargers and all accessories are warranted for one year.

Triple S reserves the right to change the warranty policy without notice.