


**TEAM PLEASCENT CLEAN**

# PRETREAT PLUS

## PRESPRAY & BONNET CLEANER

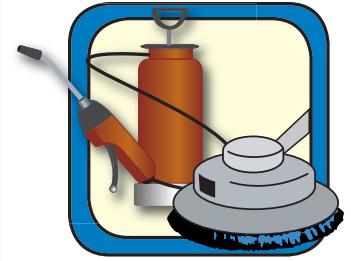

### Technical Data

#### Specifications

<b>Color:</b>	Clear
<b>Odor:</b>	Pleasantly Fresh
<b>Base:</b>	Biodegradable detergents
<b>pH:</b>	8.2 + 0.5
<b>Viscosity:</b>	Water thin
<b>Foam:</b>	Low
<b>Phosphate:</b>	None
<b>Rinsability:</b>	Excellent
<b>Flash Point (TCC):</b>	> 200°F
<b>Storage/Stability:</b>	1 year
<b>Weight Per Gallon:</b>	8.75 lbs.
<b>Freeze/Thaw Stability:</b>	Keep from freezing

#### What the Pros Know

The unique detergent system in Pretreat Plus loosens tough oils, water-based soils, and makes cleaning more effective.

#### Team Pleascent Clean

This product is one of several that feature the exclusive "Pleasant Scent" fragrance. The pros know that when you select multiple products with a common fragrance you are insuring that your facility will give a positive impression. Insist on Team Pleascent Clean cleaners and odor counteractants for your carpets, hard surfaces and restrooms.

#### Description

Ultra-low residue formula combines powerful solvents and detergents to release soils. Designed for use as a prespray in heavily soiled areas or as a spin bonnet cleaner for interim maintenance. Safe on all types of carpet. Pleasant Scent fragrance.

#### Directions

Read all directions and cautions on the label prior to using. Consult the MSDS for recommended personal protection equipment.

Vacuum carpet. Pre-test carpet for colorfastness in an out-of-sight area.

**Prespray:** Dilute 1:8 (16 oz. per gallon) Apply PreTreat Plus through a pump-up or pressure sprayer applicator. Pay particular attention to traffic lanes and heavily soiled areas. Allow prespray to dwell for 5-15 minutes. For maximum results, rake carpet to loosen matted carpet fibers in traffic areas to increase soil removal. Extract with Carpet Rinse Plus, or your favorite SSS extraction cleaner according to label directions.

**Rotary Spin Bonnet:** Dilute 1:16 (8 ounces per gallon of water).

**Spray Method:** Mix solution in a pump-up or pressure sprayer applicator. Generously prespray carpet and allow 5-10 minutes dwell time. Do not allow to dry. Lightly spray the bonnet pad before bonnetting. As the pad becomes soiled, turn over or replace.

**Immersion Method:** Immerse bonnet pad in diluted solution, then wring out tightly. Position bonnet on rotary floor machine. When both sides of the pad are soiled, rinse in clear water, wring out tightly, and re-soak in cleaning solution before proceeding.

**Penetrates & Lifts  
Tough Oil &  
Water-based Soils**

**Neutral pH**

**Prespray & Bonnet  
Application**

